

User Manual

Fury LED with 2pcs 10W RGBW 4IN1 LEDs

Thank you for your choosing our products. Please read following guides carefully before using.

Part One: Display Menu:

1. ADDR—DMX Address Setting: 1-512
2. CHND—DMX Channel Mode: 1CH/3CH
3. SLND—Master/Slave: MAST/SL 1/SL 2
4. SHND—Built-in Programs: SH 0SH 8
5. SOUN—Sound Activation: ON/OFF
6. BLND—Choose the situation after switch on: NO (DMX Mode after switch on)/
YES (Sound Activation after switch on)
7. LED—LED display light: ON/OFF
8. DISP—Display reverse: DISP/PSID
9. TEST—Auto test:
10. FHRS—Used Hours:
11. VER—Program Version:
12. REST—Reset:

Part Two: DMX Channels:

1CH Mode:

CH1: 0-29 Stop,

30-255 RGBW color mixing run by built-in programs, motor run by sound (Motor will run slowly if no sound)

3CH Mode:

CH1: 0 LED Off, 1-199 Dimmer, 200-247 Strobe, 248-255 Full On

CH2: 0-255 RGBW Color Mixing

CH3: 0-9 Stop, 10-120 Motor anticlockwise rotating (speed from fast to slow), 121-134 Stop,
135-245 Motor clockwise rotating (speed from slow to fast), 246-255 Stop

Part Three: Remarks

1. First button: MODE, Second button: DOWN, Third button: UP, Fourth button: ENTER.
2. Press MODE once, press ENTER for 3s, then you can enter into motor fine.
3. Press MODE for 2s under submenu, then you can return back to main menu.
4. DMX512 signal have precedence over sound and auto.